

Troubleshooting Guide

CADDX Systems

Changing and Adding User Codes:

8600 & 8900 Series Systems

To change Master code (#1): Press * 1 # old Master code * 1 # new Master code * 1 #

IMPORTANT: Changing the Master code will delete all auxiliary codes and Duress code. They must be reprogrammed into system after changing Master code. Duress is user # 7.

To add or change auxiliary codes: Press * (code #) # Master code * (code #) # auxiliary code * (code #) #

Example: * 2 # master code * 2 # user code * 2 #

Activating Chime Mode:

To turn chime on – Press first digit of Master code wait five seconds keypad will beep once.

Resetting Smoke Detectors:

Press and hold the # button for two seconds.

Bypassing Zone:

Press the * button, then the single digit zone number or numbers then * again. Bypassed zone(s) will be lit.

Arming in Instant:

Press the * key on your keypad while the system is armed. At this time the “Instant” light will illuminate and there will be no entry delay when the entry/exit doors are opened. By pressing the * key again the “Instant” light will turn off, and the entry delay will not be present on entry/exit doors.

Keypad Control Tones (beeps):

A sounder is built into the keypad and may sound for any of the following reasons:

- Beeps for all key presses.
- Sounds a continuous tone during the Entry delay time.
- Pulses when a day zones is violated while the system is disarmed.
- Pulses when a Fire zone has a trouble condition.
- Pulses when the armed status changes and the AC power is off.
- Beeps 3 times for trying to arm with the “Ready” light off, if “Force Arming” has not been selected.
- Beeps 1 second for the “Chime” feature.
- Beeps 1 second at the end of the exit delay.
- Beeps to indicate telephone line fault if selected.
- Beeps 1 long beep followed by 3 short beeps to alert you that there’s only 10 seconds remaining in the exit delay.